

Section 12 - Parts List


Contents

PL1.1	Covers I	12-2
PL1.2	Covers II	12-4
PL2.1	Paper Cassette I	12-6
PL2.2	Paper Cassette II	12-8
PL3.1	Paper Feeder	12-10
PL4.1	Chute MBF	12-12
PL5.1	P/H Assy	12-14
PL6.1	Chute Trans & Fuser	12-16
PL7.1	Exit	12-18
PL8.1	Drive & Xerographics	12-20
PL9.1	Frame & Size Sensor	12-22
PL10.1	Electrical	12-24

Using the Parts List

1. The numbers shown in each illustration correspond to the parts list number for that illustration.
2. Throughout this manual, parts are identified by the prefix "PL", followed by a number, a decimal point, and another number. For example, PL3.1.12 means the part is item 12 of parts list 3.1.
3. The capital letters "C", "E", and "S" shown in an illustration stand for C-ring, E-ring, and Screw, respectively.
4. A shaded triangle t in an illustration indicates the item is part of an assembly.
5. The notation "with X~Y" following an part name indicates an assembly that is made up of components X through Y. For example, "1 (with 2~4)" means part 1 consists of part 2, part 3, and part 4.
6. The notation "RS" means that the part is a requested spare. Part numbers for these parts will be provided as soon as they are available.
7. An asterisk * following a part name indicates the page contains a note about this part.
8. The notation "J1<>J2 and P2" is attached to a wire harness. It indicates that connector jack 1 is attached to one end of the wire harness and connector jack 2 is attached to the other end that is plugged into plug 2.
9. A notation "(part of item 1.1)" indicates that the part is included with item 1.2.1 (PL1.2, line item 1).

PL1.1 Covers I

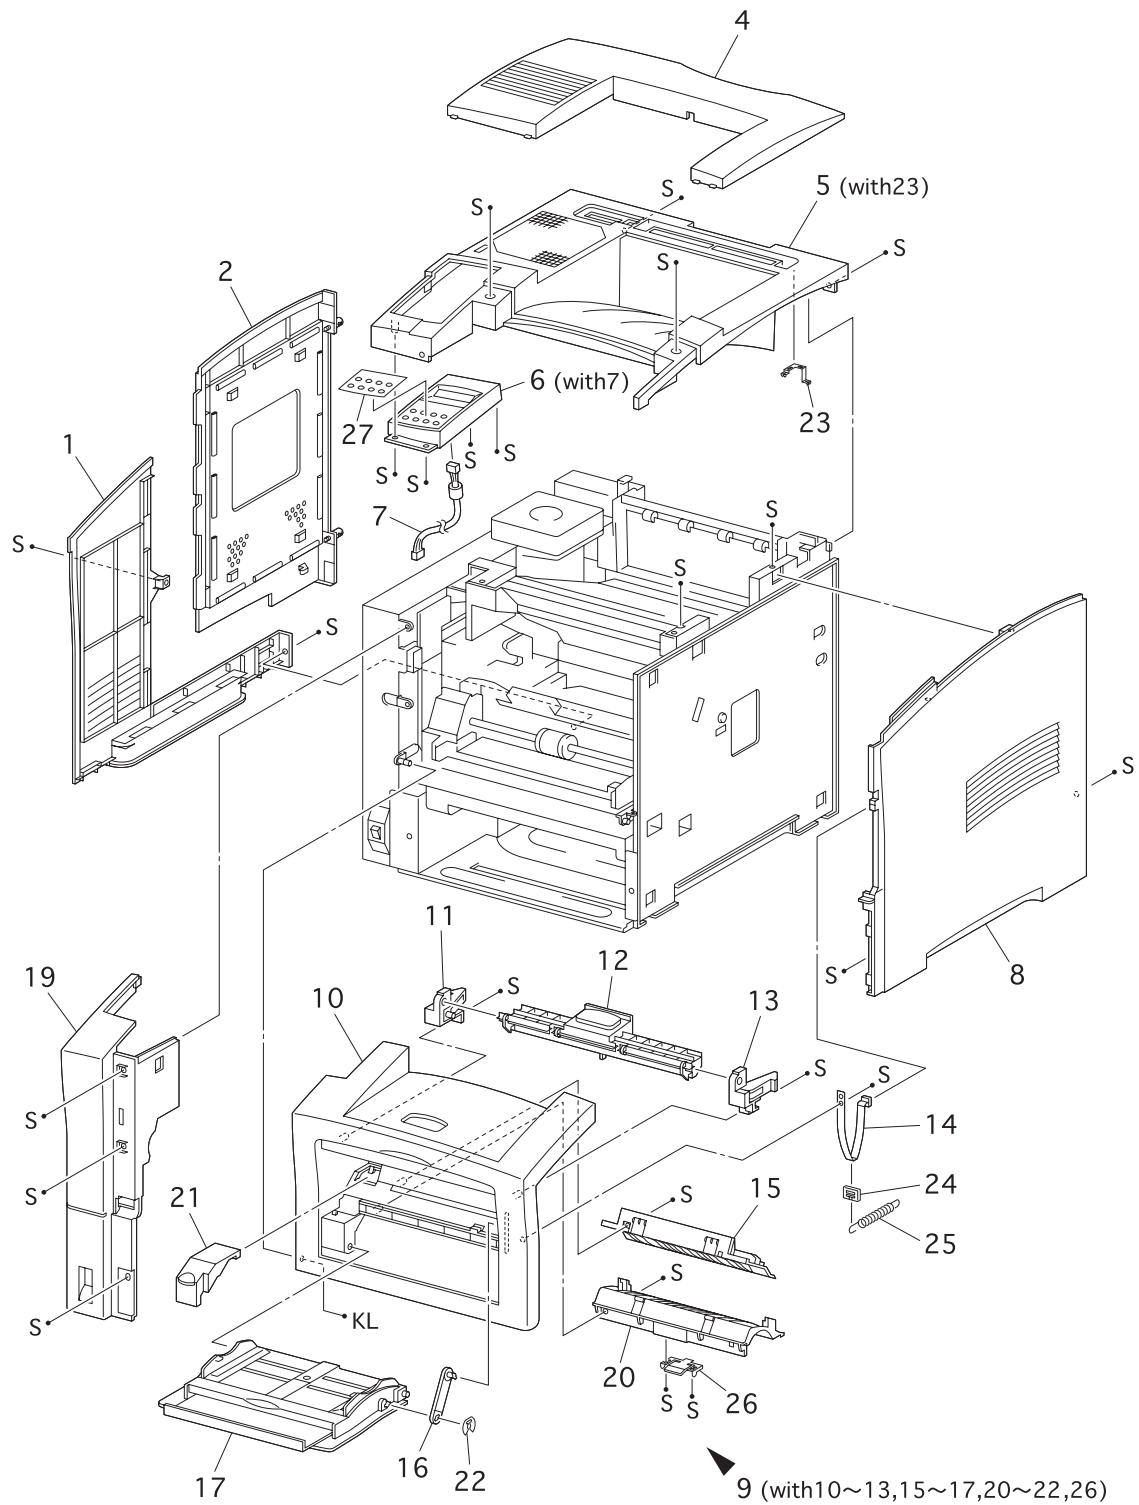


engine pl001FA

PL1.1 Covers I

ITEM	PART NUMBER	PART NAME
1	048E64591	COVER LEFT
2	048K76270	COVER ASSY I/F
3	---	
4	048E64642	COVER OPTION
5	048K76455	COVER ASSY TOP (with 23)
6	802K51410	CONTROL ASSY PANEL (with 7)
7	162K43680	HARNESS ASSY PANEL (J362-J363)
8	048E64612	COVER RIGHT
9	048K76243	COVER ASSY FRONT (with 10~13,15~17,20~22,26)
10	---	COVER FRONT
11	---	LATCH ASSY L
12	---	LEVER
13	---	LATCH ASSY R
14	003E48991	STOPPER COVER
15	---	CHUTE ENV
16	003E43880	STOPPER TRAY
17	050K37121	TRAY ASSY MBF
18	---	
19	048E64624	COVER FRONT L/H
20	---	CHUTE MBF
21	---	ENV GEAR COVER
22	354W24254	CLIP
23	---	SPRING EARTH EXIT 2
24	---	JOINT SPRING
25	---	SPRING FRONT
26	004K01870	CLEANING PAD ASSY
27	---	CONTROL PANEL OVERLAY

PL1.2 Covers II

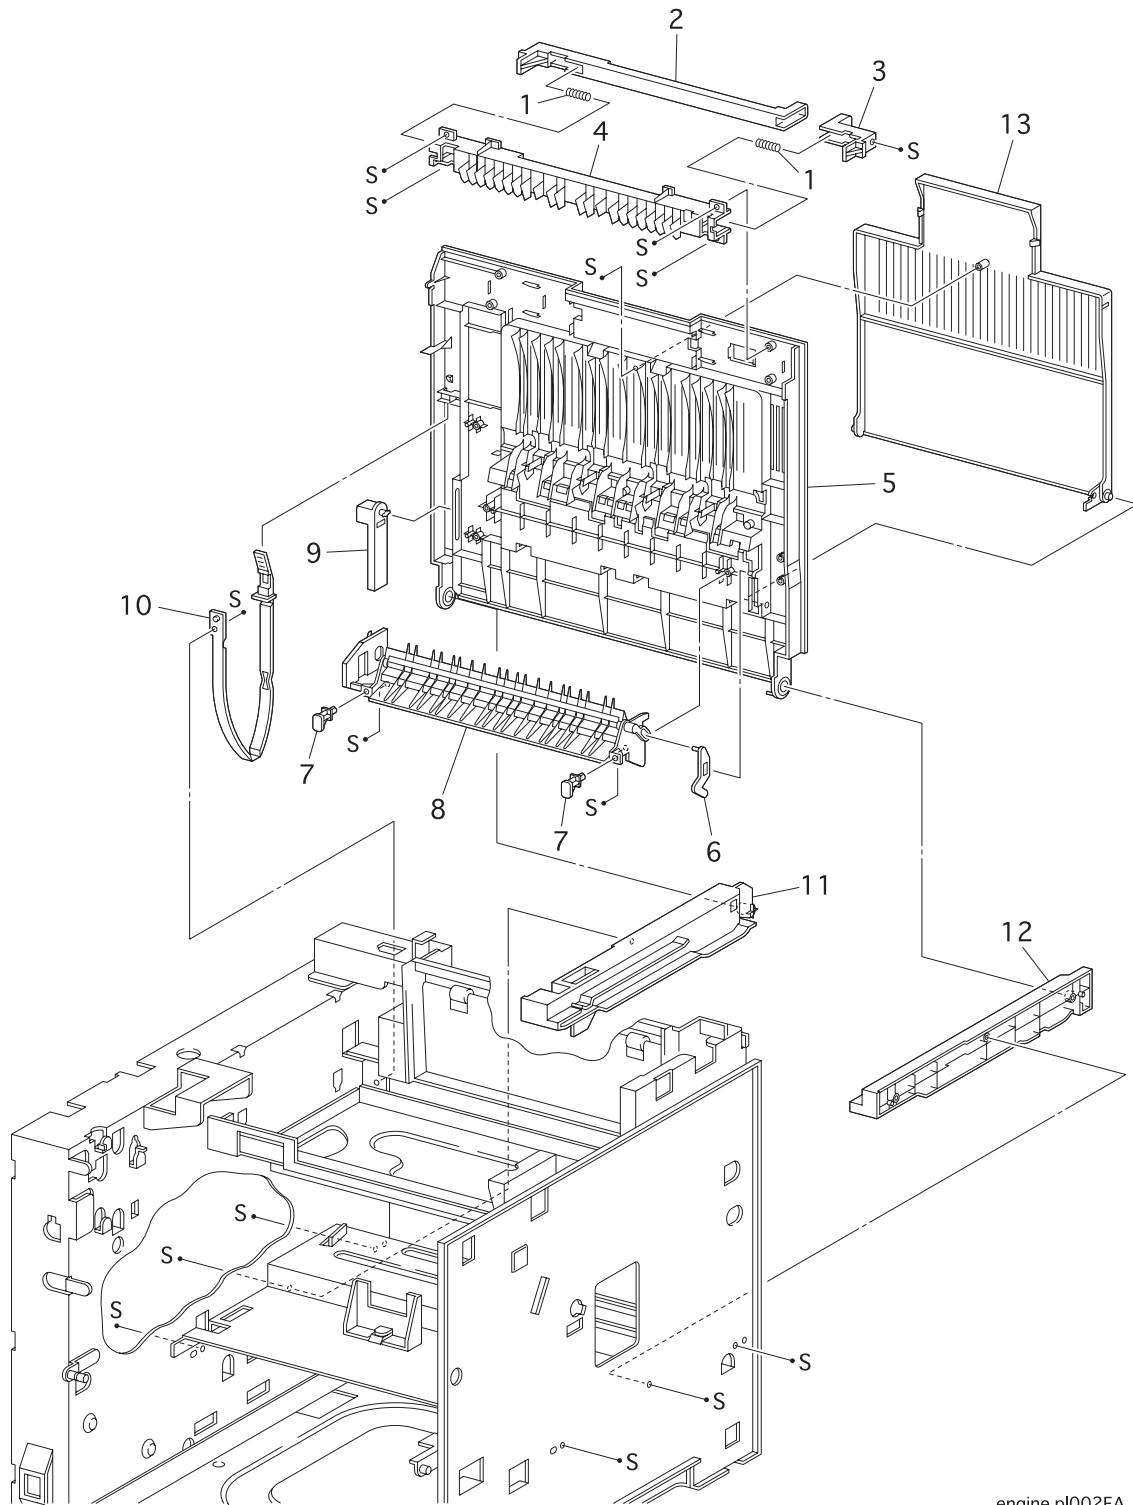

engine pl002FA

PL1.2 Covers II


ITEM	PART NUMBER	PART NAME
1	---	SPRING LATCH
2	---	LATCH L
3	---	LATCH R
4	---	COVER LATCH
5	---	COVER REAR
6	---	ARM DIRECTION
7	---	CAP ENVELOPE
8	---	CHUTE ASSY FACE UP
9	---	STOPPER PIVOT R
10	003E46120	STOPPER
11	---	GUIDE RAIL DUP L
12	---	GUIDE RAIL DUP R
13	---	OVER FACE UP
98	600K79530	KIT CAP ENVELOPE (qty. 2 of item 7)
99	802K12743	COVER ASSY REAR (with 1~9)



PL2.1 Paper Cassette I

ITEM	PART NUMBER	PART NAME
1	---	CASSETTE ASSY (with 2~23)
2	---	PLATE ASSY BOTTOM
3	---	
4	---	
5	604K04810	KIT GUIDE END
6	---	HOUSING EXTENSION
7	---	SLIDE RACK
8	---	SPRING EXTENSION
9	---	LATCH SPRING
10	---	PLATE SIZE
11	---	BASE EXTENSION
12	---	GUIDE SIZE L
13	---	GUIDE ASSY SIDE R
14	---	LINK
15	---	BASE CST
16	---	RACK
17	---	PINION
18	---	CASSETTE SUB ASSY [same PL2.21]
19	---	ACTUATOR CST
20	---	COVER ACTUATOR
21	---	LABEL BUTTON
22	---	LABEL INDICATOR
23	---	LABEL CST INSTRUCTION


PL2.2 Paper Cassette II

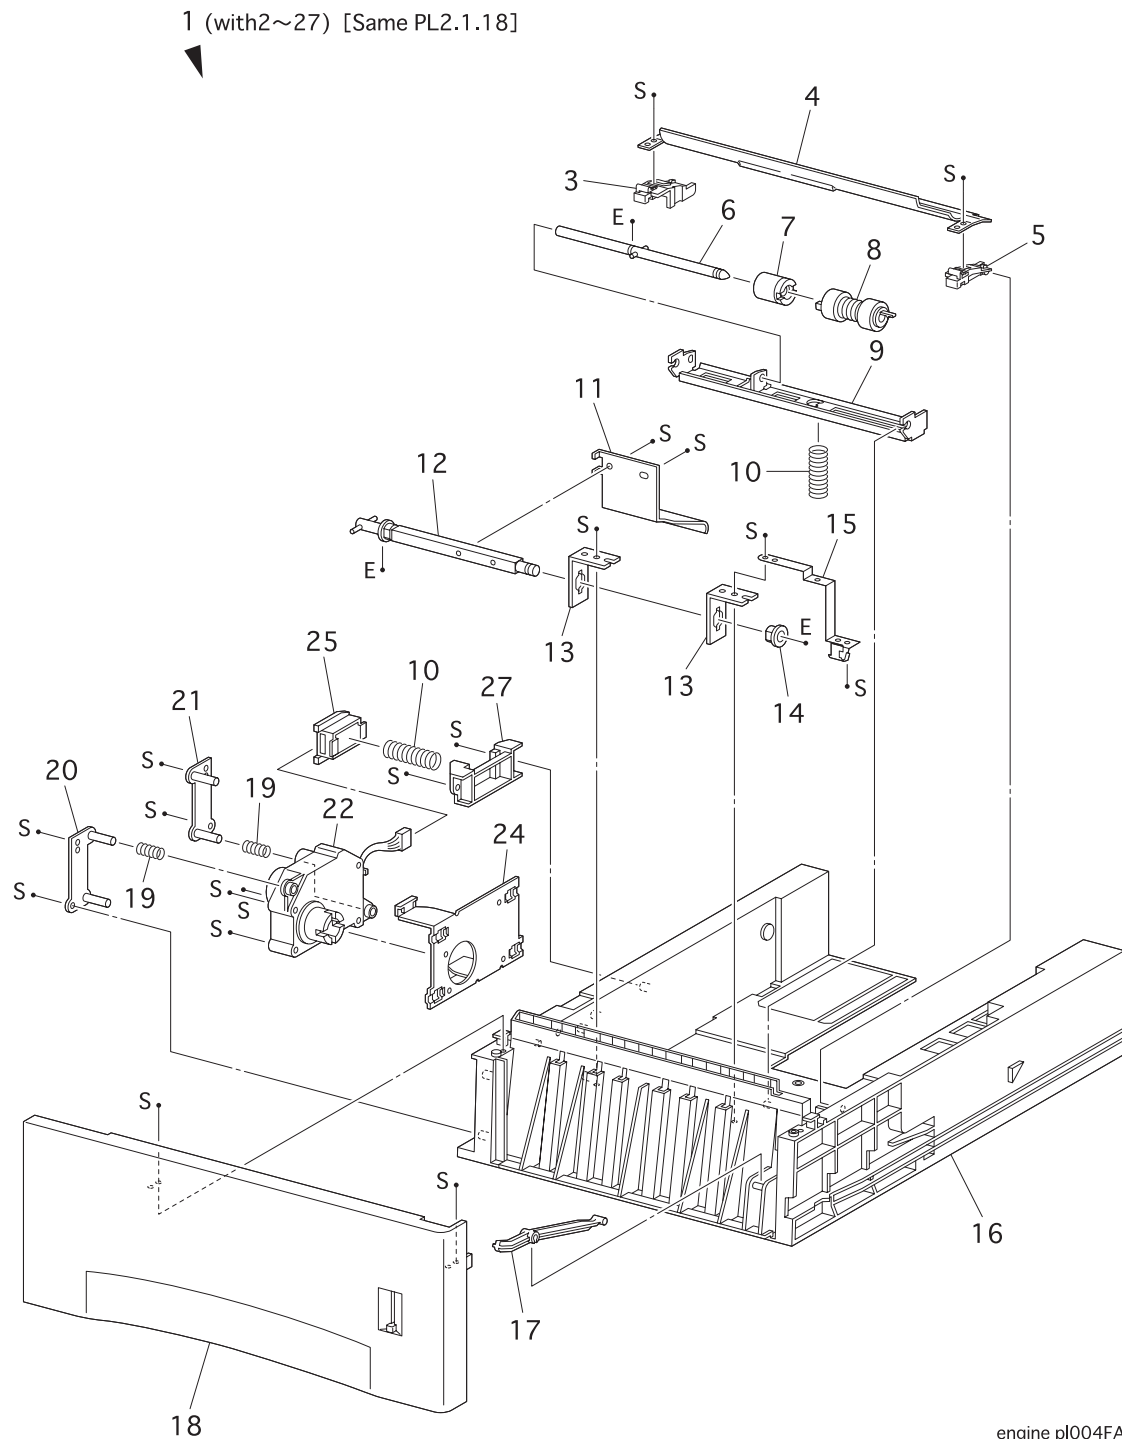

PL2.2 Paper Cassette II

ITEM	PART NUMBER	PART NAME
1	---	CASSETTE SUB ASSY (with 2~27) [Same PL2.1.18] (REF. ONLY)
2	---	
3	---	CHUTE RETARD BASE L
4	---	CHUTE RETARD
5	---	CHUTE RETARD BASE R
6	---	SHAFT ASSY RETARD
7	005K82890	CLUTCH ASSY FRICTION
8	---	ROLL ASSY
9	---	BRACKET RETARD
10	809E11830	SPRING RETARD
11	---	PLATE TONGUE
12	---	SHAFT ASSY TONGUE
13	---	HOLDER SHAFT LIFT UP
14	---	BEARING
15	---	SPRING EARTH LIFT UP
16	---	HOUSING CASSETTE
17	---	LEVER
18	---	HANDLE ASSY CASSETTE
19	---	SPRING MOTOR
20	---	HOLDER R
21	---	HOLDER L
22	127K24682	MOTOR ASSY
23	---	
24	---	HOLDER ASSY MOTOR
25	114E11680	CONNECTOR
26	---	
27	---	GUIDE SOCKET
99	600K79550	KIT ROLL FEED (qty. 3 of item 8)

PL3.1 Paper Feeder

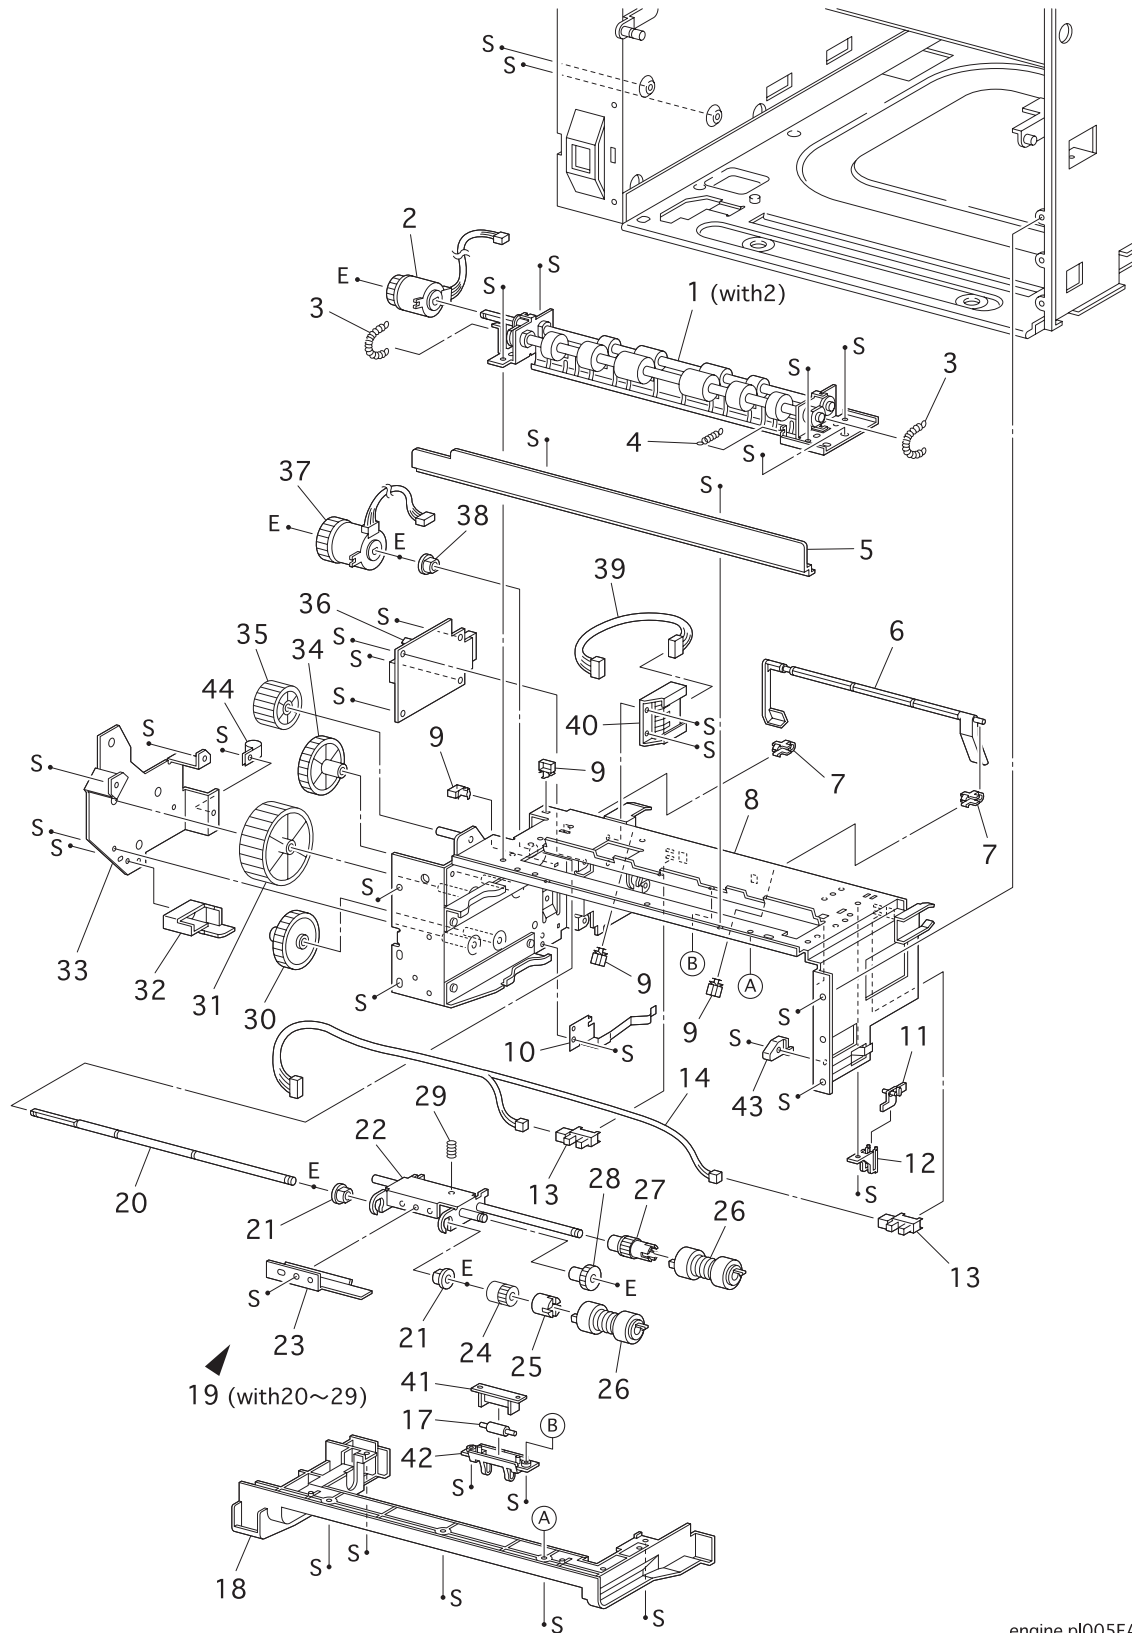


engine pl005FA

PL3.1 Paper Feeder

ITEM	PART NUMBER	PART NAME
1	022K66290	ROLL ASSY TURN (with 2)
2	121K20151	CLUTCH ASSY TURN
3	---	SPRING EXTENSION
4	809E11630	SPRING CHUTE
5	---	COVER CST FEED
6	120E16960	ACTUATOR N/P
7	830E18132	SUPPORT ACTUATOR
8	---	FRAME ASSY FEEDER
9	---	CLAMP
10	---	SPRING LATCH L
11	---	ACTUATER LOW PAPER
12	---	SUPPORT ACTUATOR L/P
13	130E81970	SENSOR PHOTO :FACE CONTROL,LOW PAPER
14	162K47211	HARNESS ASSY N/SNSR (J66-J661,J662)
15	---	
16	---	
17	---	ROLL 7
18	---	COVER FEEDER
19	600K79320	FEEDER ASSY (with 20~29)
20	---	SHAFT FEED
21	---	BEARING
22	---	SUPPORT ASSY NUDGER
23	---	CLUTCH NUDGER
24	---	CLUTCH GEAR
25	---	CLUTCH ASSY O/W
26	---	ROLL ASSY
27	---	GEAR 25T
28	---	GEAR 31T
29	---	SPRING NUDGER
30	---	GEAR 4
31	---	GEAR 2
32	---	COVER GEAR
33	---	BRACKET
34	---	GEAR 3
35	---	GEAR 1
36	160K52781	PWBA FEEDER
37	121K19010	CLUTCH ASSY FEED
38	---	BEARING
39	---	HARNESS ASSY N/MOT (J67-J671)
40	---	SOCKET
41	---	SUPPORT ROLL-7
42	---	CHUTE TURN
43	---	STOPPER CST
44	---	CLAMP
96	600K79640	KIT SOCKET & HARNESS (39, 40) (same as)
97	600K79652	KIT ACTUATOR & SUPPORT (11, 12)
98	022K56902	KIT FEEDER ASSY (1~40)
99	600K79550	KIT ROLL FEED (qty. 3 of item 26)


PL4.1 Chute MBF

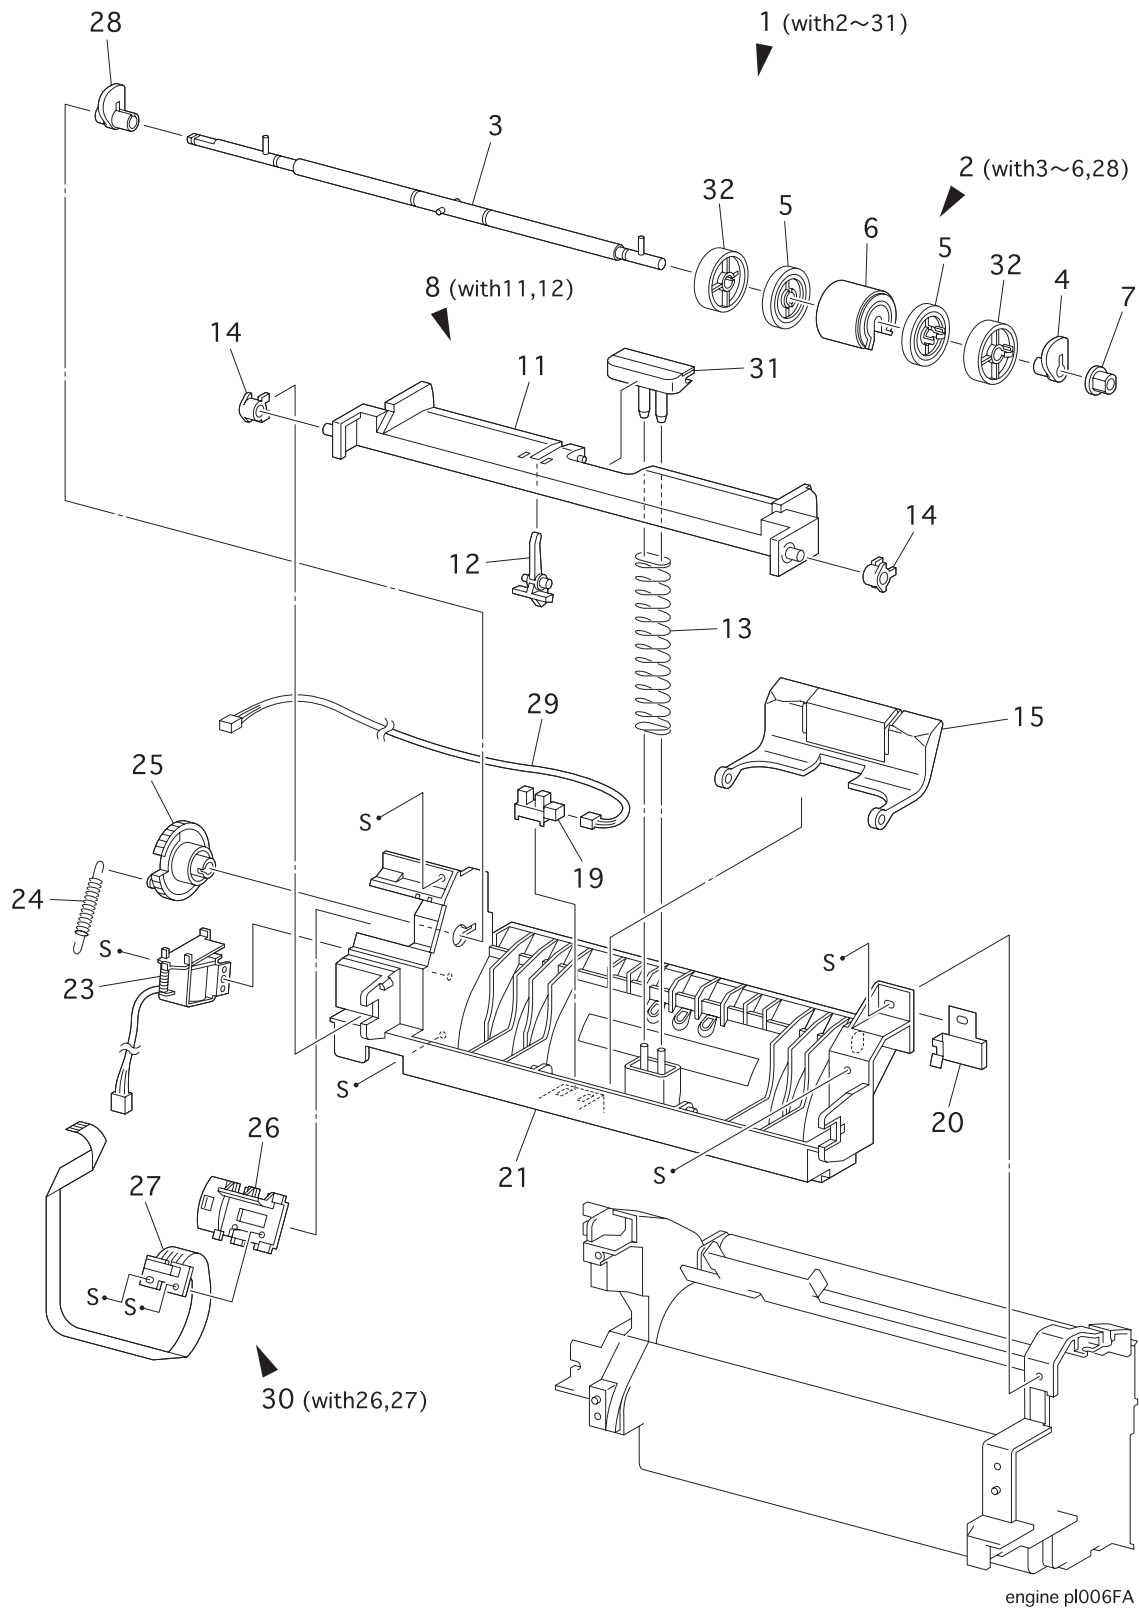

PL4.1 Chute MBF

ITEM	PART NUMBER	PART NAME
1	054K22391	CHUTE MBF ASSY (with 2~31)
2	---	ROLL ASSY MBF (with 3~6,28)
3	---	SHAFT ASSY MBF
4	---	CAM PICK UP MBF
5	---	CORE
6	022K50815	ROLL ASSY MBF
7	---	BEARING
8	---	TRAY BOTTOM ASSY (with 11,12)
9	---	
10	---	
11	---	TRAY BOTTOM
12	120E17121	ACTUATOR N/P MBF
13	---	SPRING TRAY BOTTOM MBF
14	---	BEARING EXIT
15	019K94573	PAD ASSY RETARD
16	---	
17	---	
18	---	
19	130E81970	SENSOR PHOTO :PAPER SET
20	---	PLATE EARTH MBF
21	---	CHUTE ASSY MBF
22	---	
23	121E85920	SOLENOID PICK UP
24	809E20171	SPRING MBF
25	007E54661	GEAR PICK UP
26	---	PLATE ENV CONECTOR
27	113K82141	CONECTOR ASSY ENV
28	---	CAM PICK UP MBF (LEFT)
29	162K47021	HARNESS ASSY MBF NOPAP (J45-J451)
30	---	PLATE ENV ASSY (with 26,27)
31	019K96830	PAD ASSY PICK UP
32	---	GUIDE ROLL


PL5.1 P/H Assy

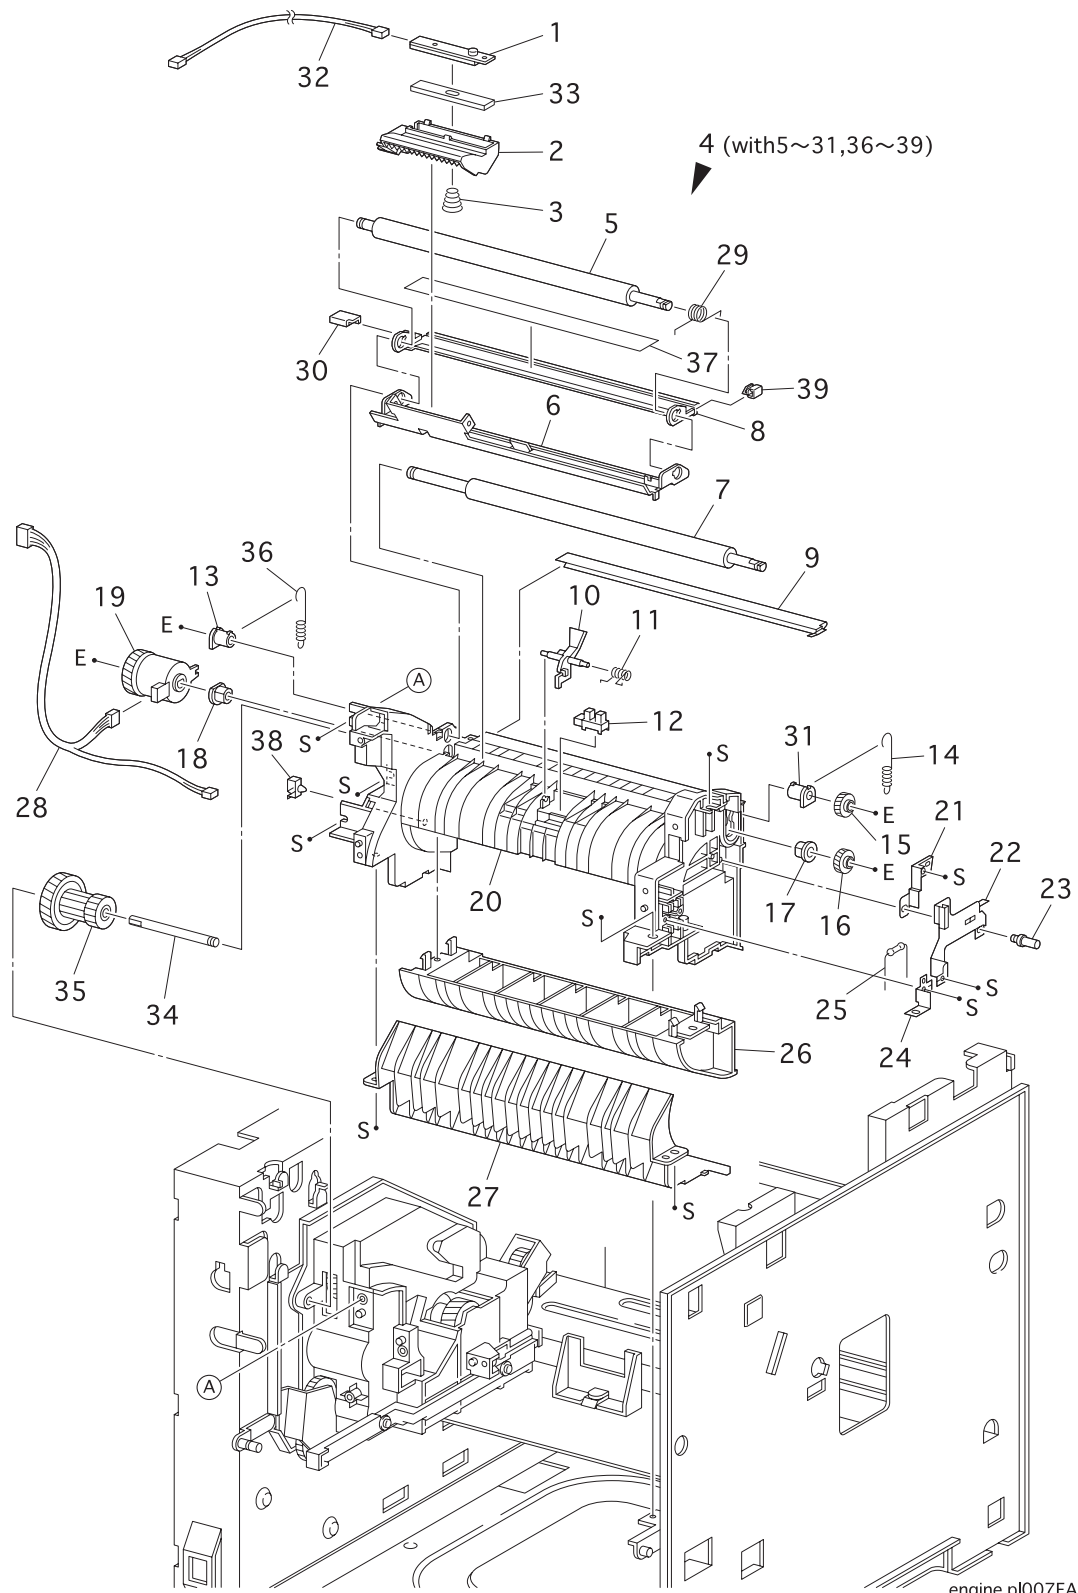

PL5.1 P/H Assy

ITEM	PART NUMBER	PART NAME
1	---	TONER SENSOR
2	---	HOLDER TONER SENSOR
3	---	SPRING TONER SENSOR
4	054K14985	P/H ASSY (with 2,5~31,36~39)
5	---	ROLL REGI METAL
6	---	CHUTE UPPER ASSY
7	059K11911	ROLL REGI RUBBER
8	---	CHUTE INLET
9	---	SPRING EARTH BOTTOM
10	120E13331	ACTUATOR REGI
11	809E19722	SPRING SENSOR REGI
12	130E81970	SENSOR PHOTO :REGI
13	---	BEARING METAL
14	809E22950	SPRING REGI
15	007E54671	GEAR REGI METAL
16	007E54681	GEAR REGI RUBBER
17	---	BEARING RUBBER R
18	---	BEARING RUBBER L
19	121E85821	CLUTCH REGI
20	---	CHUTE BOTTOM UPPER
21	---	SPRING EARTH RIGHT
22	---	SPRING EARTH CENTER
23	---	SCREW EARTH
24	---	SPRING LEFT
25	---	RESISTOR
26	---	CHUTE BOTTOM LOWER
27	---	CHUTE CST
28	162K47011	HARNESS ASSY REGI (J43-J432,J433)
29	---	SPRING TORSION
30	---	HANDLE LEVER
31	---	BEARING METAL R
32	---	HARNESS ASSY TONER SENSOR (J42-J421)
33	---	CUSHION TNS
34	006E60981	SHAFT 14
35	007E54650	GEAR 14
36	809E19030	SPRING REGI L
37	---	LABEL INLET
38	---	CLAMP
39	---	CAP INLET
99	600K79381	KIT TONER SENSOR (with 1~3, 32, 33)

PL6.1 Chute Trans & Fuser

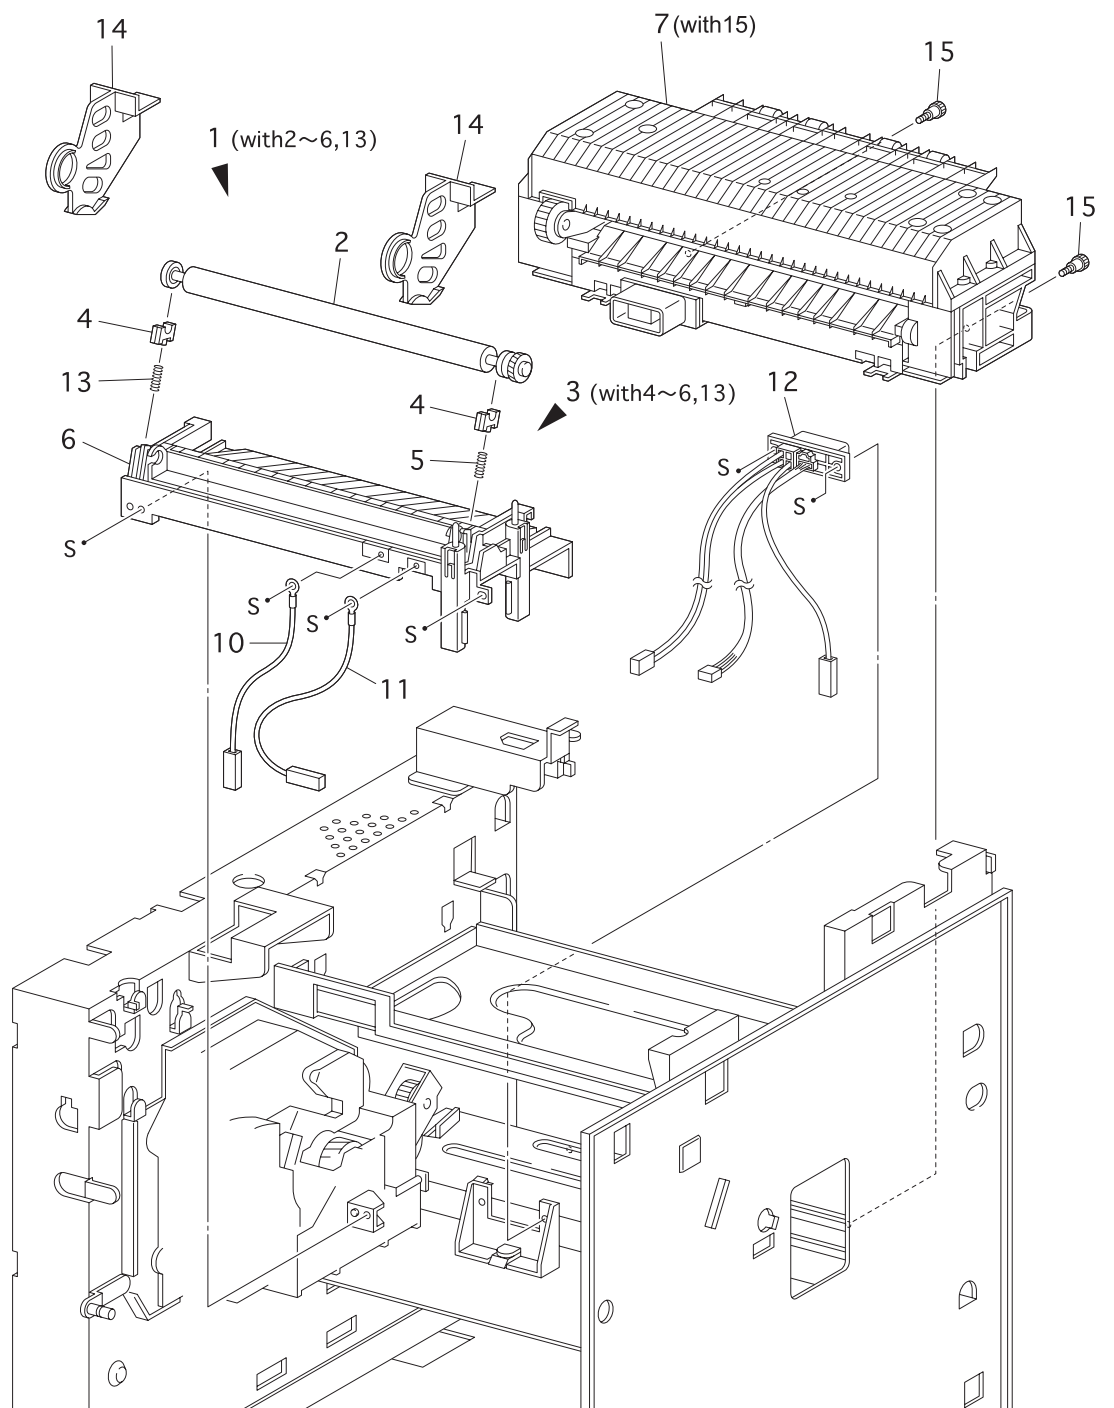


engine pl008FA

PL6.1 Chute Trans & Fuser

ITEM	PART NUMBER	PART NAME
1	---	BTR CHUTE ASSY (with 2~6,13)
2	022K55010	BTR ASSY
3	054K15000	CHUTE TRANS ASSY (with 4~6,13)
4	---	BEARING BTR SUP
5	---	SPRING BTR
6	---	CHUTE TRANS (REFERENCE ONLY)
7	126K14941	120V FUSER ASSY (with 15)
--	126K14941	220V FUSER ASSY (with 15)
8	---	
9	---	
10	---	WIRE ASSY DTS
11	---	WIRE ASSY TR
12	962K06310	120V HARNESS ASSY FUSER-M (J271,J11,J27,J262)
--	962K06310	220V HARNESS ASSY FUSER-M (J271,J11,J27,J262)
13	---	SPRING BTR L
14	---	HOLDER BTR
15	---	THUMB SCREW

PL7.1 Exit

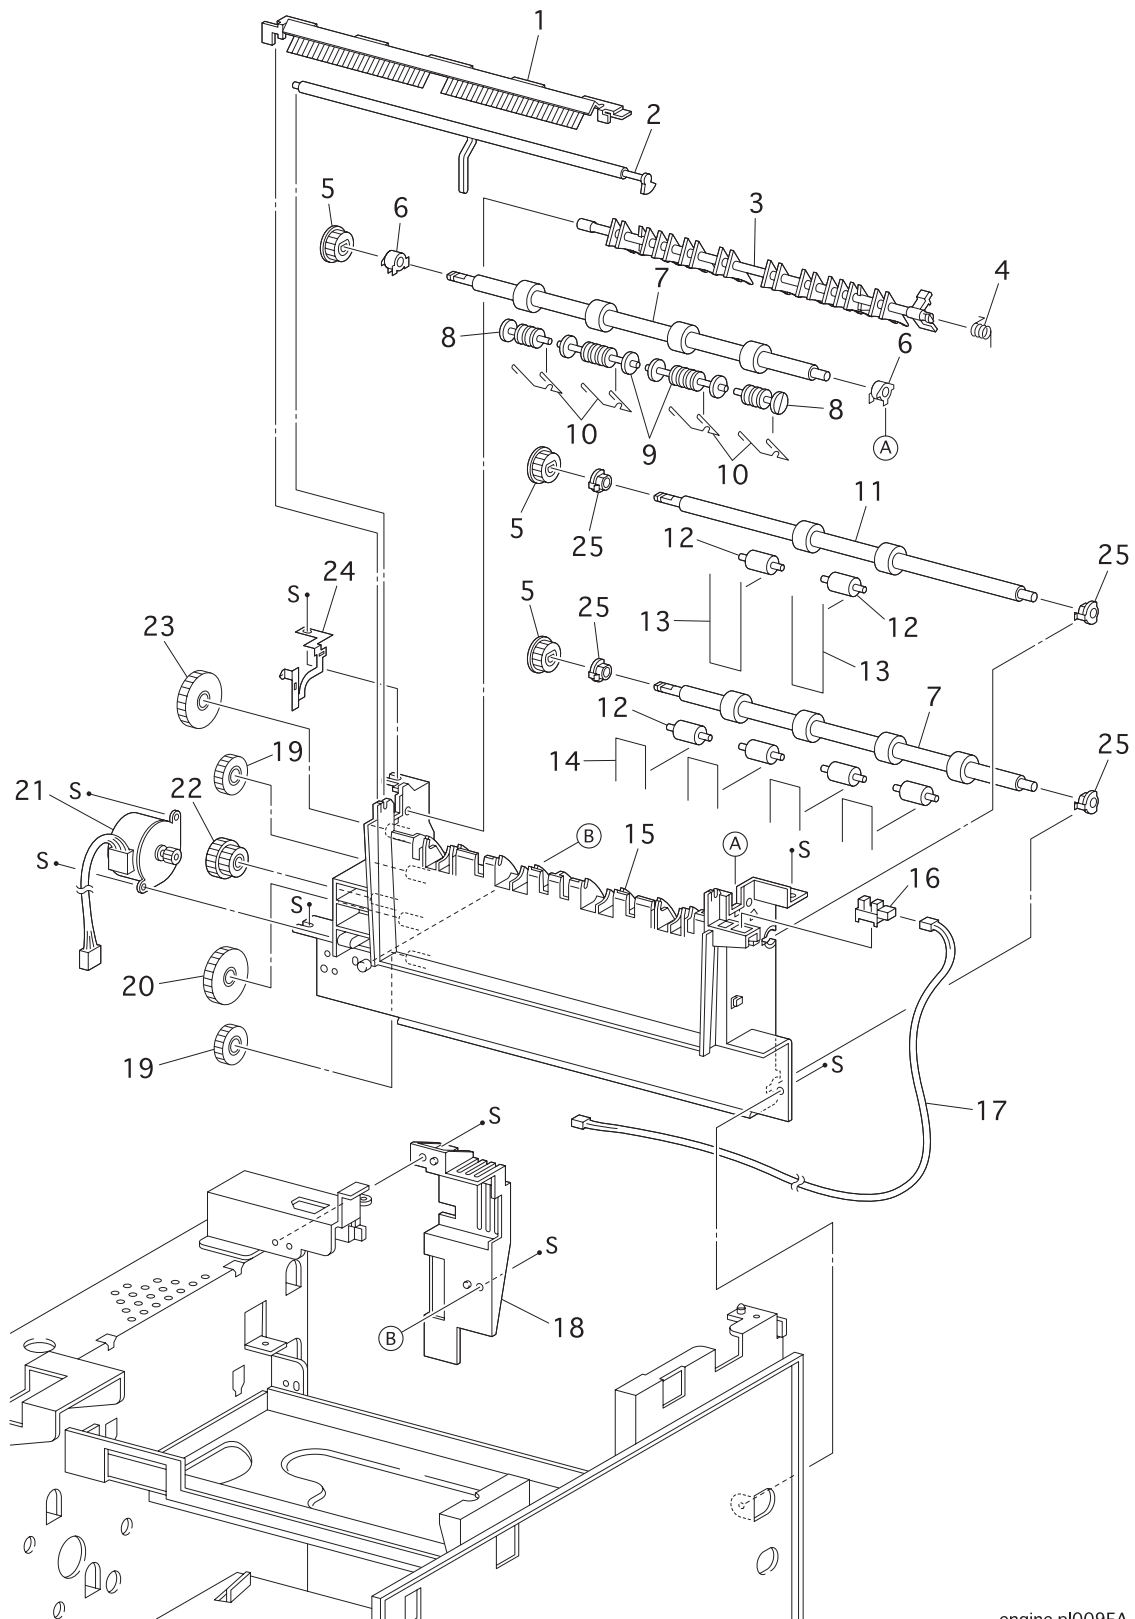


engine pl009FA

PL7.1 Exit

ITEM	PART NUMBER	PART NAME
1	105K14904	ELIMINATOR ASSY EXIT
2	120E13350	ACTUATOR FULL STACK
3	---	GATE EXIT
4	---	SPRING EXIT
5	---	GEAR EXIT-17
6	---	BEARING EXIT
7	059K11950	ROLL ASSY MID-1
8	---	ROLL PINCH EXIT OUT
9	---	ROLL PINCH EXIT
10	---	SPRING PINCH EXIT
11	059K11960	ROLL ASSY MID-2
12	---	ROLL PINCH
13	---	SPRING PINCH MID
14	---	SPRING PINCH
15	---	CHUTE EXIT
16	130E81970	SENSOR PHOTO :EXIT
17	162K46981	HARNESS ASSY FS SNR (J31-J311)
18	---	COVER INTERLOCK
19	---	GEAR EXIT-23
20	---	GEAR EXIT-33
21	127K35830	MOTOR ASSY EXIT
22	---	GEAR EXIT-17/47
23	---	GEAR EXIT-32
24	---	SPRING EARTH EXIT
25	---	BEARING MID
98	600K79540	KIT BEARING (qty. 6 of item 6)
99	054K22170	CHUTE EXIT ASSY (with 1~17, 19~24)

PL8.1 Drive & Xerographics

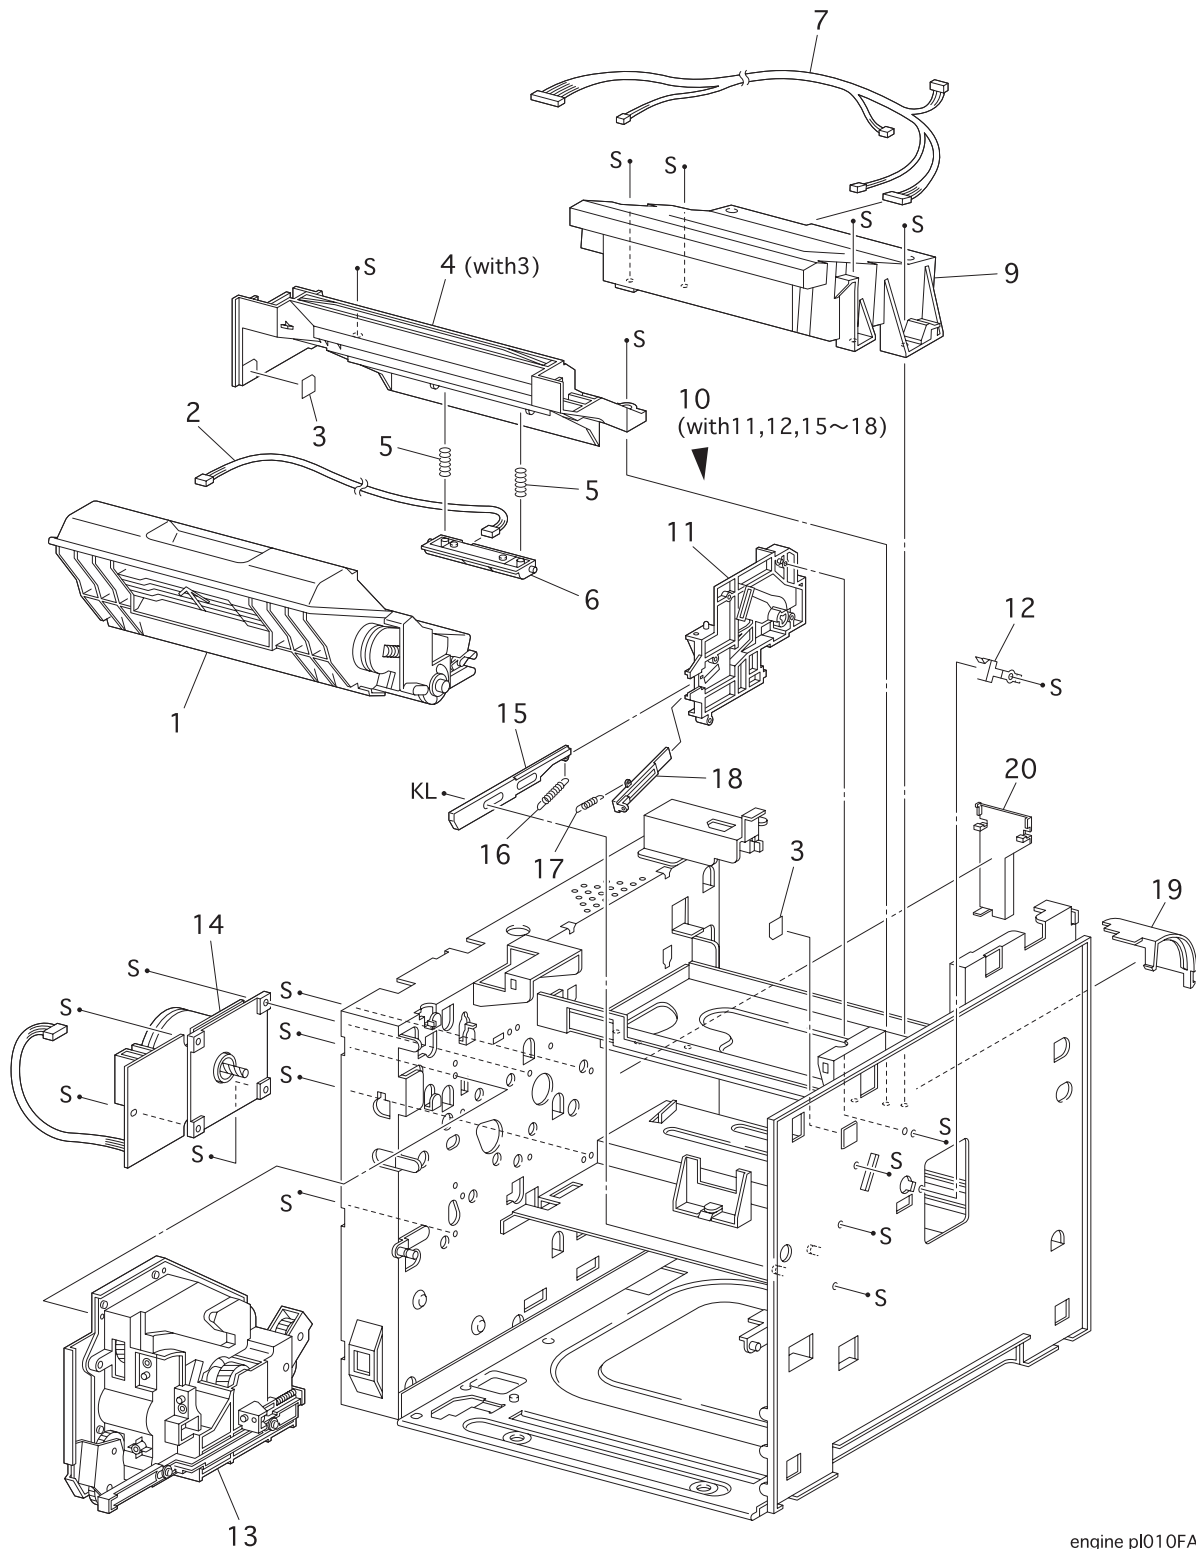


engine pl010FA

PL8.1 Drive & Xerographics

ITEM	PART NUMBER	PART NAME
1	---	CRU
2	---	HARNESS ASSY CRU SNS (J25-J251)
3	---	LABEL ARROW
4	032K94111	CRU TOP GUIDE ASSY (with 3)
5	---	SPRING
6	---	SENSOR ASSY CRU
7	962K14480	HARNESS ASSY ROS (J21,J22-J211,J212,J213,J223)
8	---	
9	062K11210	ROS ASSY
10	---	CRU SIDE GUIDE ASSY-R (with 11,12,15~18)
11	---	CRU SIDE GUIDE
12	---	SPRING CLIP
13	007K87580	GEAR ASSY DRIVE
14	127K35701	MOTOR ASSY MAIN
15	---	ARM GUIDE A
16	---	SPRING GUIDE A
17	---	SPRING GUIDE B
18	---	ARM GUIDE B
19	---	DUCT ROS
20	---	DUCT FUSER
99	032K96660	KIT SENSOR CRU

PL9.1 Frame & Size Sensor

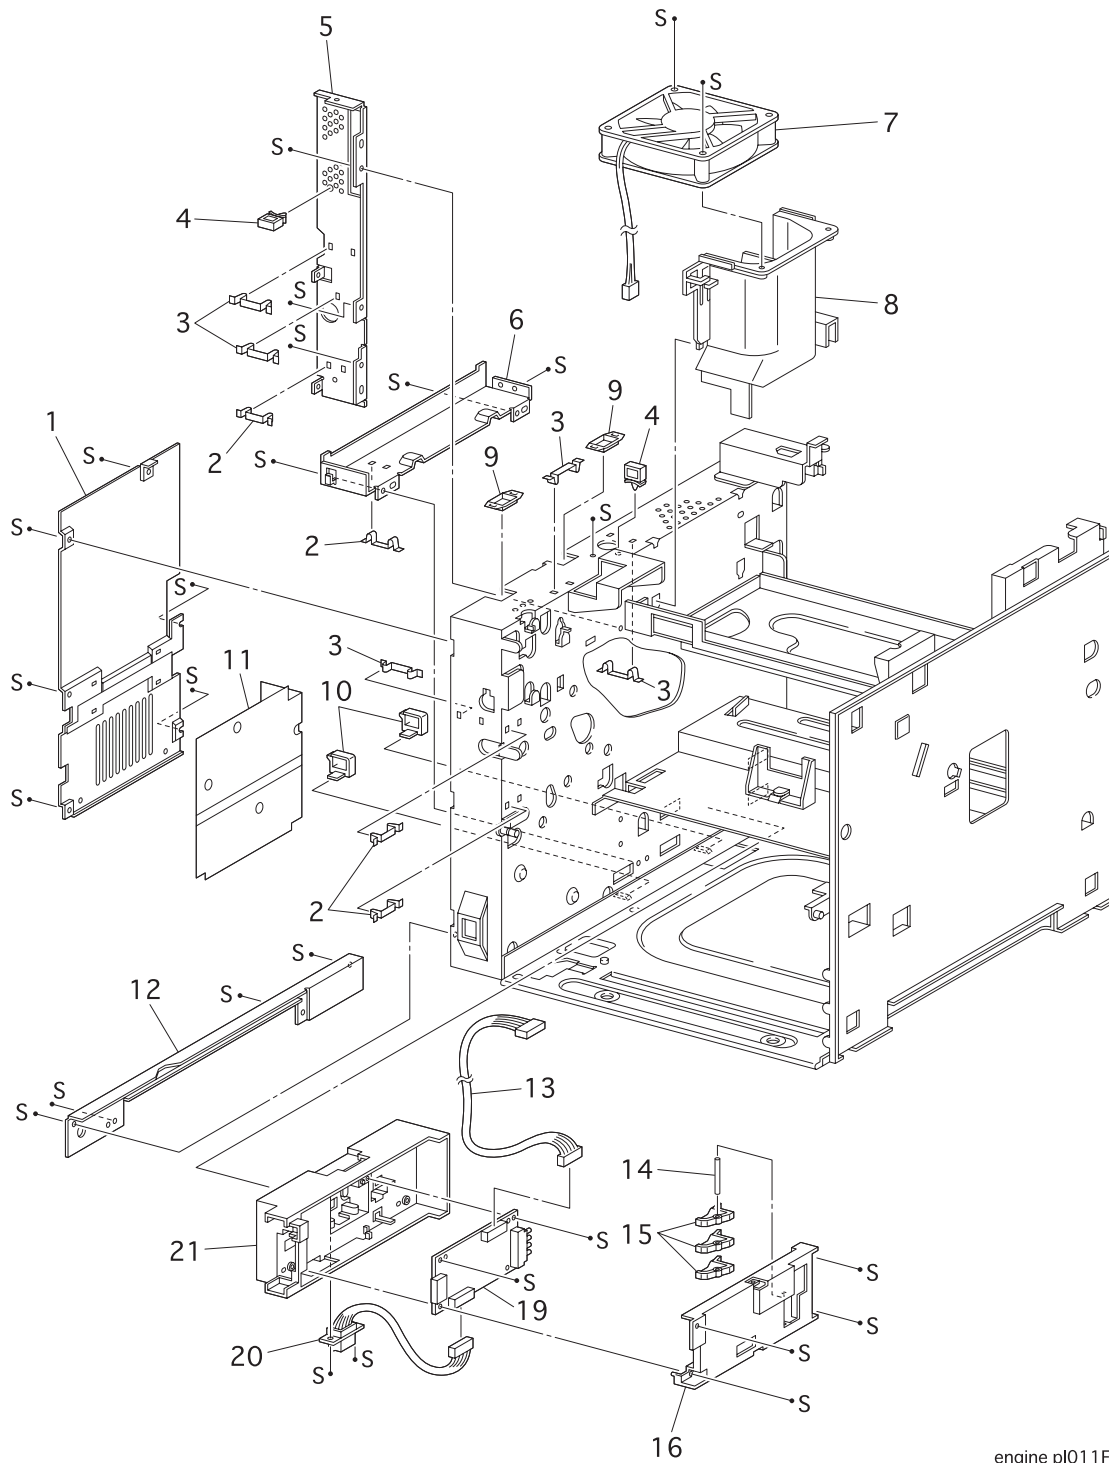


engine pl011FA

PL9.1 Frame & Size Sensor

ITEM	PART NUMBER	PART NAME
1	---	PLATE ASSY LEFT
2	---	CLAMP PRESS
3	---	CLAMP PRESS L
4	---	CLAMP I/F
5	---	ELEC BOX LOWER B
6	---	ELEC BOX LOWER A
7	127E13840	FAN ASSY
8	---	DUCT FAN
9	---	EDGE SADDLE H
10	---	CLAMP AC
11	---	PLATE INSULATOR
12	---	PLATE HANDLE
13	162K47001	HARNESS ASSY FEEDER (J33-J331)
14	---	SHAFT CAM
15	---	CAM SW
16	---	COVER SIZE SENSOR
17	---	
18	---	
19	160K52771	PWBA SIZE 1
20	162K48420	HARNESS ASSY SIZE M (J51-P511)
21	---	HOUSING SIZE SENSOR
22	---	
99	802K09970	KIT SIZE SENSOR 1

PL10.1 Electrical

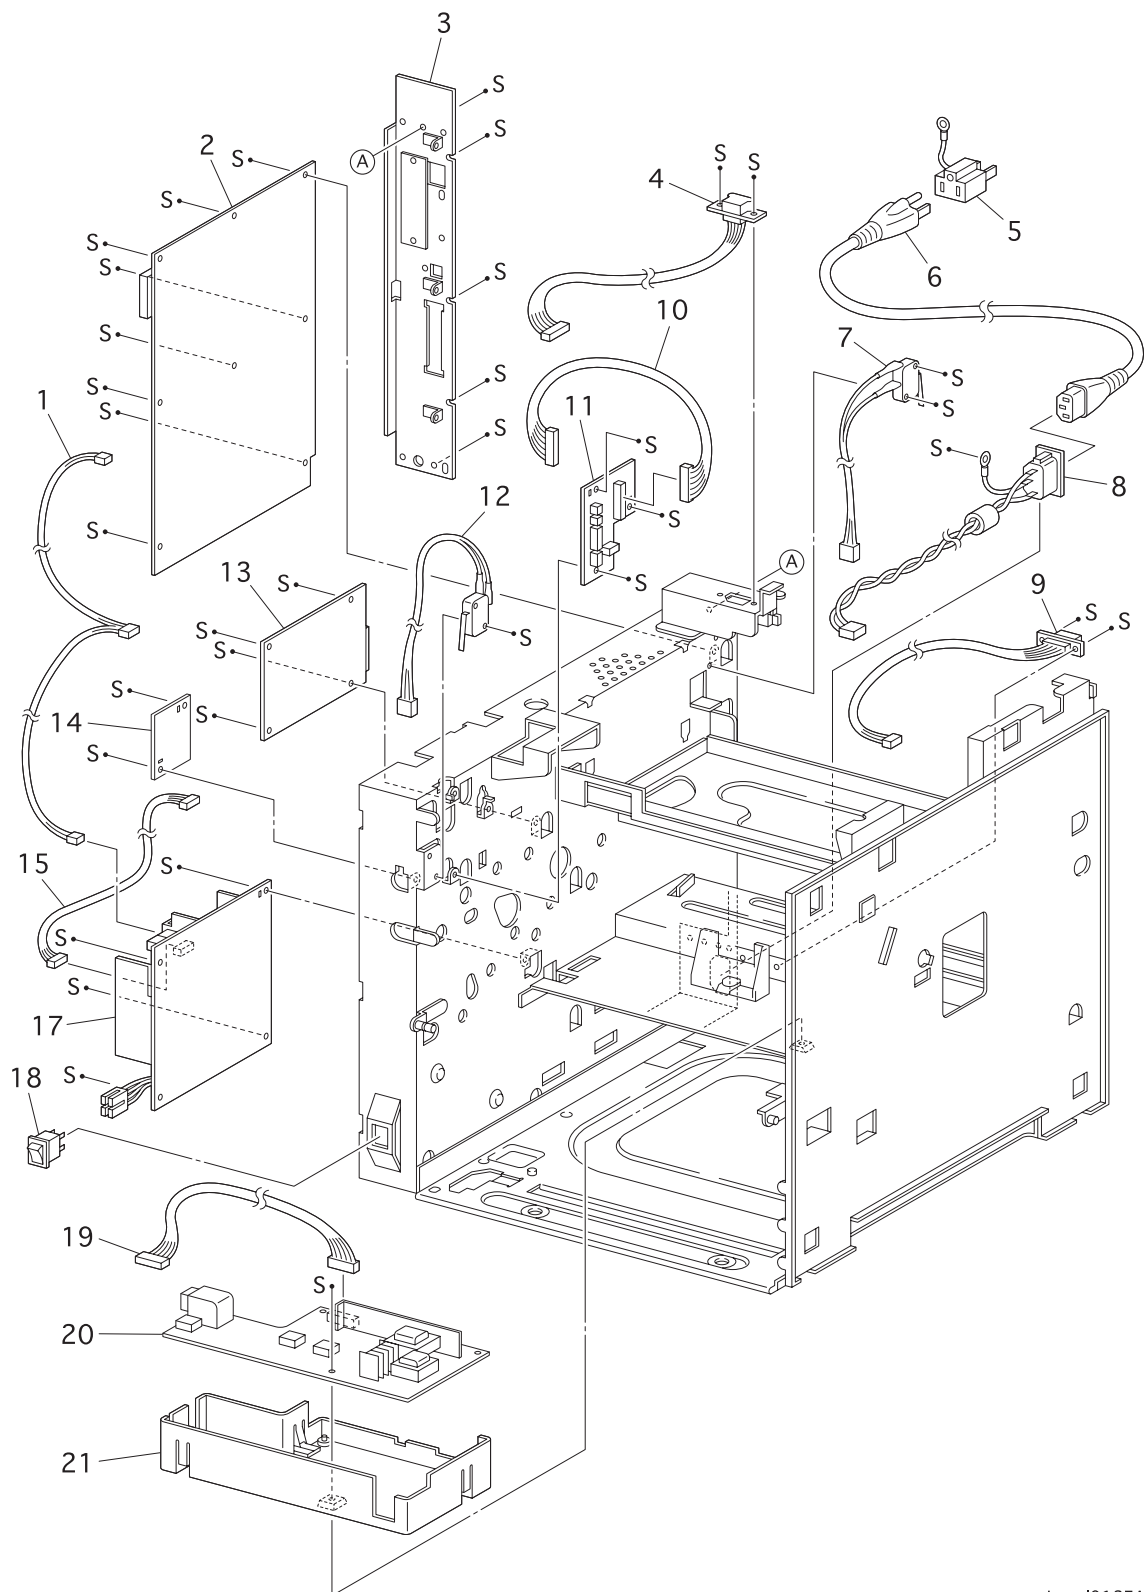

engine pl012FA

PL10.1 Electrical

ITEM	PART NUMBER	PART NAME
1	162K47201	HARNESS ASSY ESS (J287-J282,J288)
2	160K91624	PWB ESS
3	101K39511	PANEL BACK ASSY
4	162K49271	HARNESS ASSY OCT-M (J35-P202)
5	---	ADAPTER
6	---	POWER CORD
7	110K08571	SWITCH ASSY I/L REAR
8	---	WIRE ASSY AC (J285)
9	162K46991	HARNESS ASSY DUP-M (J34-P341)
10	162K46941	HARNESS ASSY CONN (J23-J231)
11	160K52761	PWBA CONN
12	110K08561	SWITCH ASSY I/L FRONT
13	160K85653	PWBA HKBMCU
14	105K15402	PWBA HKB 5VDC
15	162K46972	HARNESS ASSY LVPS (J28-J281)
16	---	
17	105K19860	PWBA HKB LVPS-120
	105K19860	PWBA HKB LVPS-230
18	110E94430	MAIN SWITCH
19	162K46962	HARNESS ASSY HVPS (J26-J261)
20	105K19750	PWBA HVPS
21	---	HOUSING HVPS
99	830E60020	BLANKING PLATE CONTROLLER (not shown)

Section 12 - Parts List


Contents

PL11.1 Option Feeder I.	12-2
PL11.2 Option Feeder II.	12-4

Using the Parts List

1. The numbers shown in each illustration correspond to the parts list number for that illustration.
2. Throughout this manual, parts are identified by the prefix "PL", followed by a number, a decimal point, and another number. For example, PL3.1.12 means the part is item 12 of parts list 3.1.
3. The capital letters "C", "E", and "S" shown in an illustration stand for C-ring, E-ring, and Screw, respectively.
4. A shaded triangle t in an illustration indicates the item is part of an assembly.
5. The notation "with X~Y" following an part name indicates an assembly that is made up of components X through Y. For example, "1 (with 2~4)" means part 1 consists of part 2, part 3, and part 4.
6. The notation "RS" means that the part is a requested spare. Part numbers for these parts will be provided as soon as they are available.
7. An asterisk * following a part name indicates the page contains a note about this part.
8. The notation "J1<>J2 and P2" is attached to a wire harness. It indicates that connector jack 1 is attached to one end of the wire harness and connector jack 2 is attached to the other end that is plugged into plug 2.
9. A notation "(part of item 1.1)" indicates that the part is included with item 1.2.1 (PL1.2, line item 1).

PL11.1 Option Feeder Ia

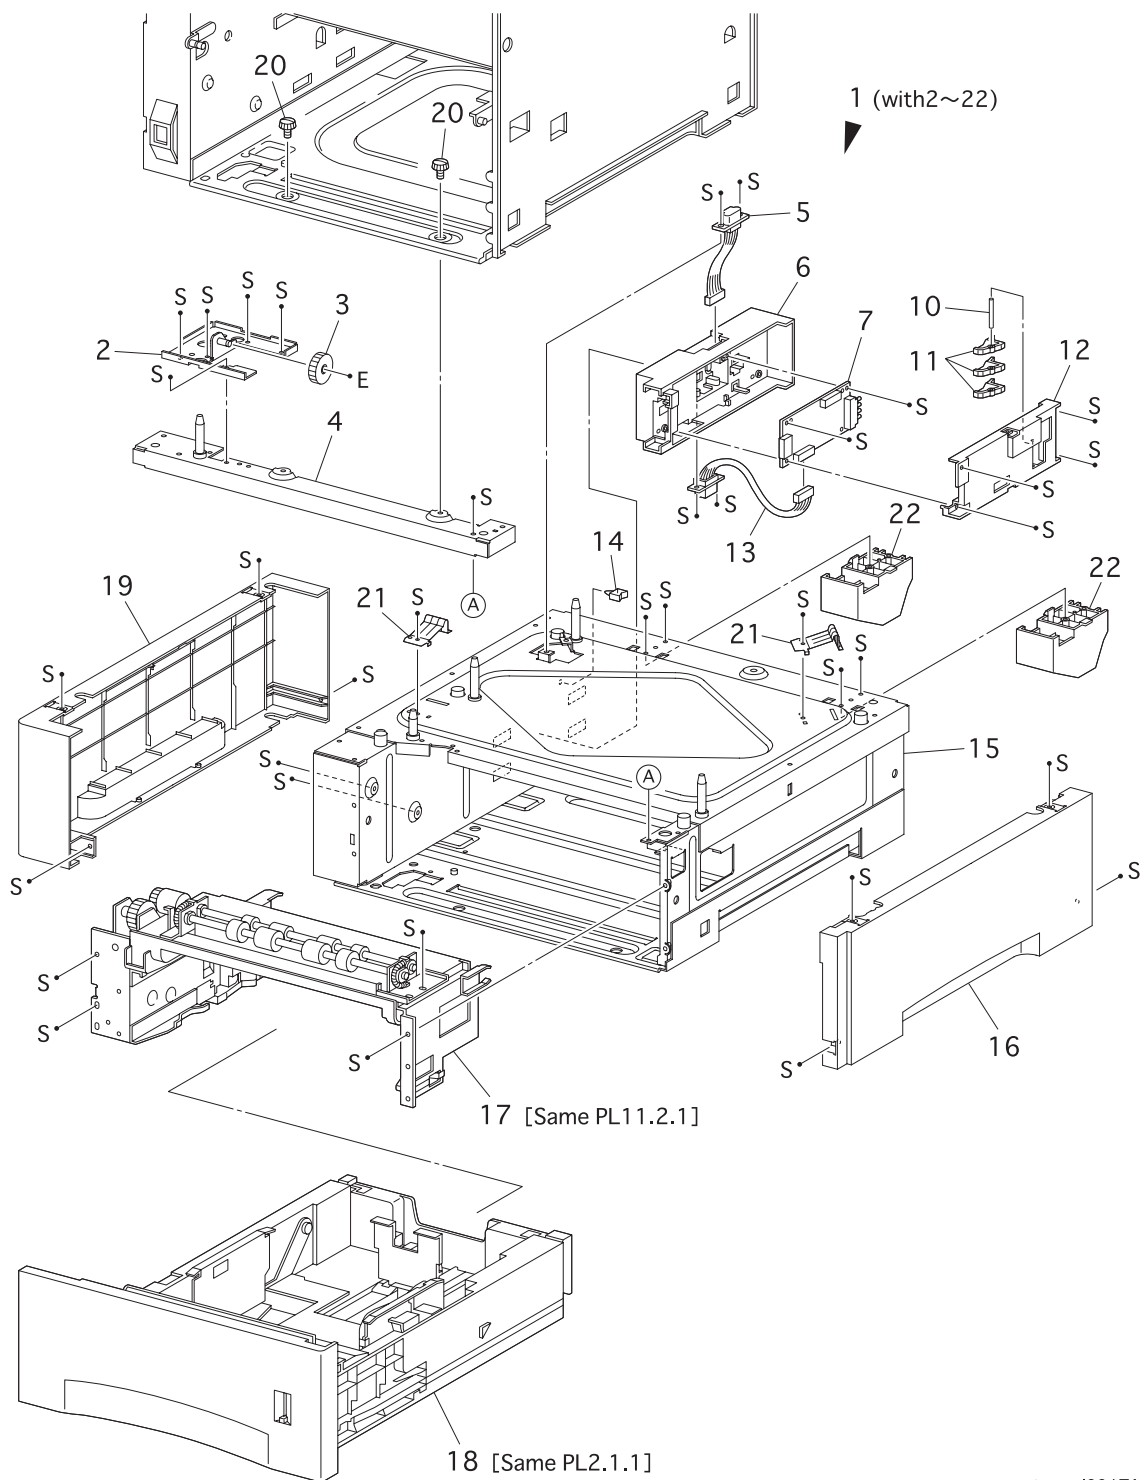


tray pl001FA

PL11.1 Option Feeder I

ITEM	PART NUMBER	PART NAME
1	---	OPTION FEEDER ASSY (with 2~22)
2	---	BRACKET ASSY OPT GEAR
3	007E54920	GEAR OPT I
4	---	PLATE TOP F
5	162K48431	HARNESS ASSY SIZE OPTION (J52-J521)
6	---	HOUSING SIZE SENSOR
7	160K53061	PWBA SIZE OPTION
8	---	
9	---	
10	---	SHAFT CAM
11	---	CAM SW
12	---	COVER SIZE SENSOR
13	56735601	HARNESS ASSY SIZE M (J53-J531)
14	---	CLAMP
15	---	FRAME ASSY MAIN
16	802E04931	HOUSING SIDE R
17	022K56912	FEEDER ASSY [Same PL11.2.1]
18	---	CASSETTE ASSY [Same PL2.1.1]
19	802E04920	HOUSING SIDE L
20	600K79670	KIT SCREW (qty. 3)
21	---	SPRING EARTH OPT FDR
22	---	BLOCK OPT CST
99	802K09980	HOUSING ASSY SIZE SENSOR 2 (with items 5~13)

PL11.2 Option Feeder II

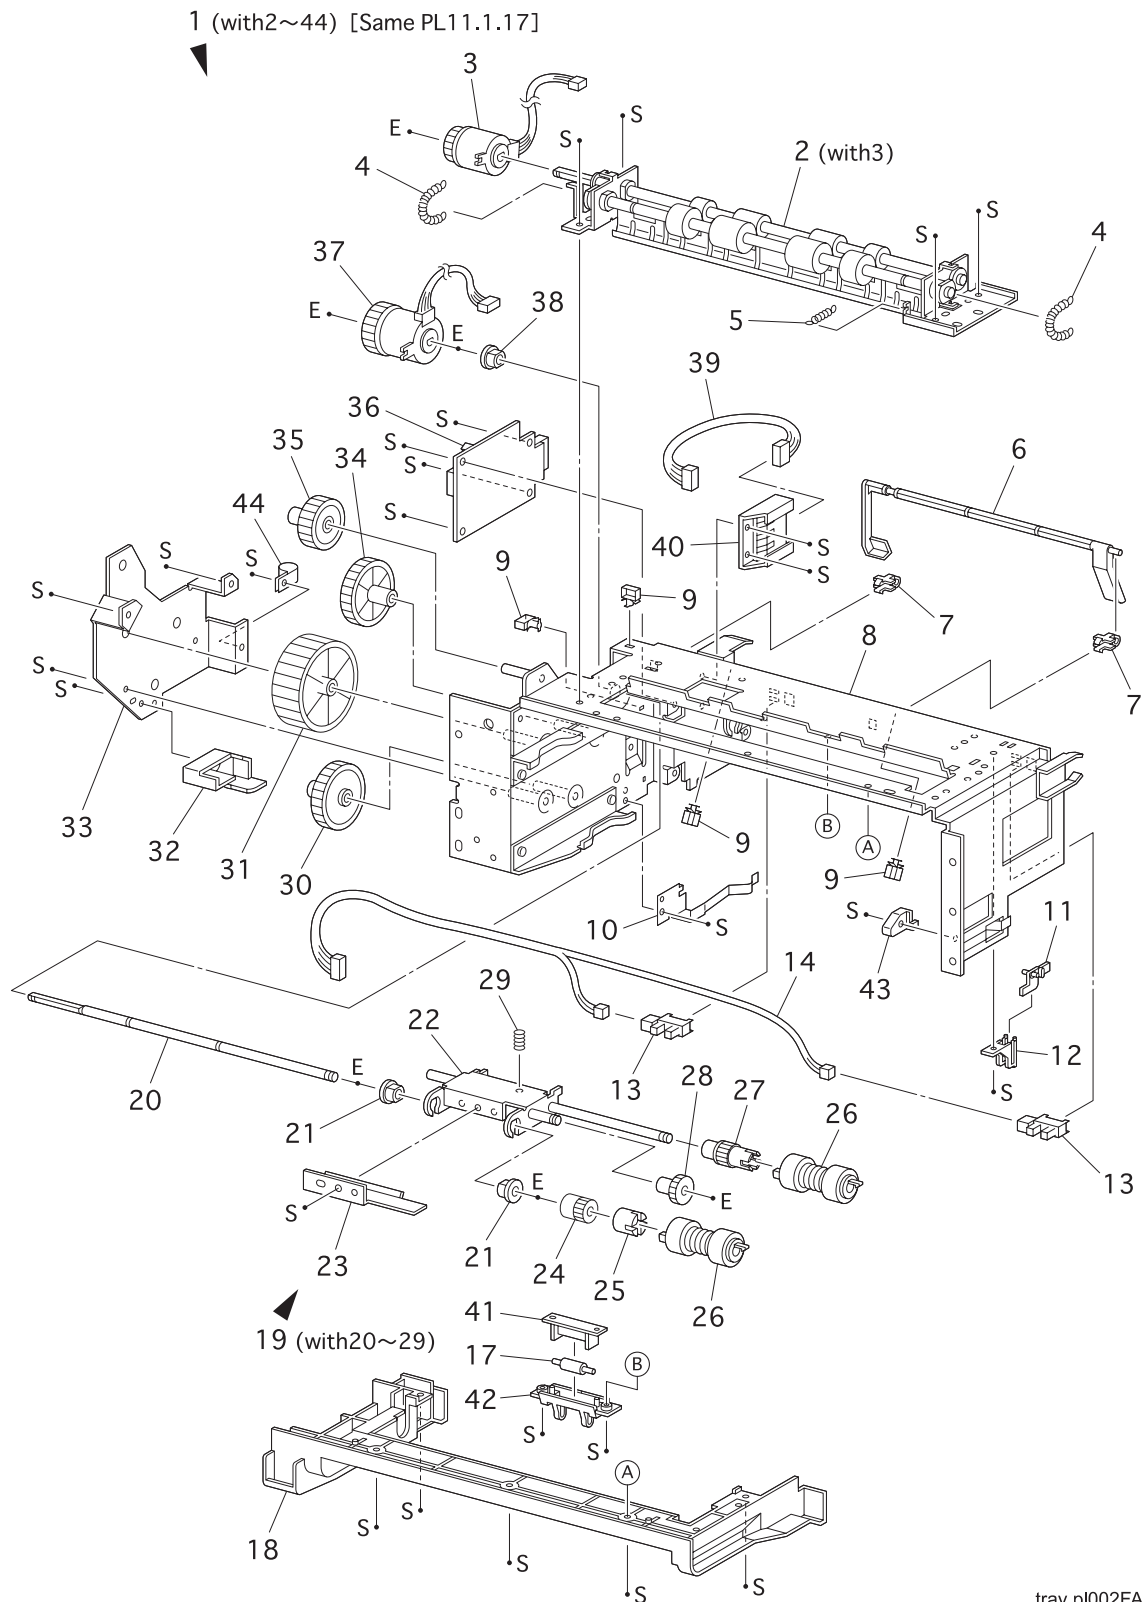

PL11.2 Option Feeder II

ITEM	PART NUMBER	PART NAME
1	022K56912	FEEDER ASSY (with 2~44) [Same PL11.1.17]
2	022K66300	ROLL ASSY TURN (with 3)
3	121K20151	CLUTCH ASSY TURN
4	---	SPRING EXTENSION
5	809E11630	SPRING CHUTE
6	120E16960	ACTUATER N/P
7	830E18132	SUPPORT ACTUATER
8	---	FRAME ASSY FEEDER
9	---	CLAMP
10	---	SPRING LATCH L
11	---	ACTUATER LOW PAPER
12	---	SUPPORT ACTUATER L/P
13	130E81970	SENSOR PHOTO :FACE CONTROL,LOW PAPER
14	162K47030	HARNESS ASSY N/SNSR (J66-J661,J662)
15	---	
16	---	
17	---	ROLL 7
18	---	COVER FEEDER
19	---	FEEDER ASSY (with 20~29)
20	---	SHAFT FEED
21	---	BEARING
22	---	SUPPORT ASSY NUDGER
23	---	CHUTE NUDGER
24	---	CLUTCH GEAR
25	---	CLUTCH ASSY O/W
26	---	ROLL ASSY
27	---	GEAR 25T
28	---	GEAR 31T
29	---	SPRING NUDGER
30	---	GEAR 4
31	---	GEAR 2
32	---	COVER GEAR
33	---	BRACKET
34	---	GEAR 3
35	---	GEAR OPT
36	160K52781	PWBA FEEDER
37	121K19010	CLUTCH ASSY FEED
38	---	BEARING
39	---	HARNESS ASSY N/MOT (J67-J671)
40	---	SOCKET
41	---	SUPPORT ROLL-7
42	---	CHUTE TURN
43	---	STOPPER CST
44	---	CLAMP
96	600K79640	KIT SOCKET & HARNESS (39, 40)
97	600K79652	KIT ACTUATOR & SUPPORT (11, 12)
98	022K56902	KIT FEEDER ASSY (1~40)
99	600K79550	KIT ROLL FEED (qty. 3 of item 26)

Parts List

Section 12 - Parts List


Contents

PL12.1 Envelope Feeder I	12-2
PL12.2 Envelope Feeder II	12-4

Using the Parts List

1. The numbers shown in each illustration correspond to the parts list number for that illustration.
2. Throughout this manual, parts are identified by the prefix "PL", followed by a number, a decimal point, and another number. For example, PL3.1.12 means the part is item 12 of parts list 3.1.
3. The capital letters "C", "E", and "S" shown in an illustration stand for C-ring, E-ring, and Screw, respectively.
4. A shaded triangle t in an illustration indicates the item is part of an assembly.
5. The notation "with X~Y" following an part name indicates an assembly that is made up of components X through Y. For example, "1 (with 2~4)" means part 1 consists of part 2, part 3, and part 4.
6. The notation "RS" means that the part is a requested spare. Part numbers for these parts will be provided as soon as they are available.
7. An asterisk $*$ following a part name indicates the page contains a note about this part.
8. The notation "J1<>J2 and P2" is attached to a wire harness. It indicates that connector jack 1 is attached to one end of the wire harness and connector jack 2 is attached to the other end that is plugged into plug 2.
9. A notation "(part of item 1.1)" indicates that the part is included with item 1.2.1 (PL1.2, line item 1).


PL12.1 Envelope Feeder I

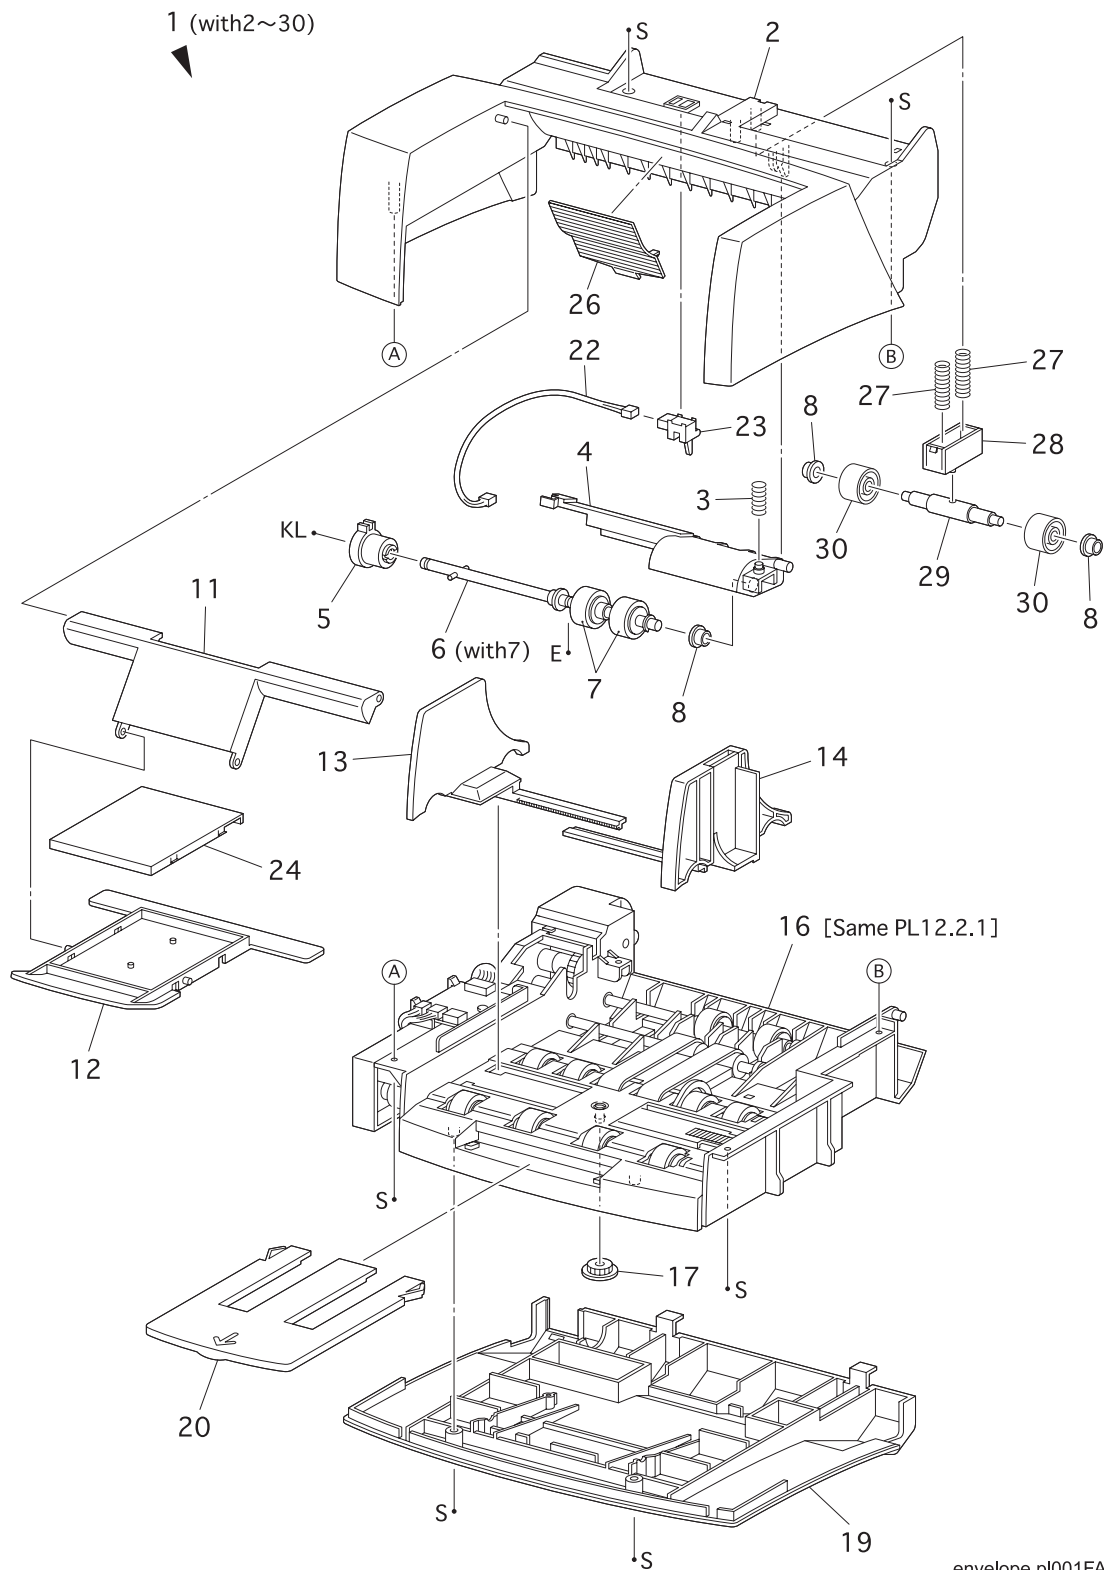

PL12.1 Envelope Feeder I

ITEM	PART NUMBER	PART NAME
1	---	ENVELOPE FEEDER ASSY (with 2~30)
2	054E14453	CHUTE TOP
3	---	SPRING RETARD
4	---	HOLDER RETARD
5	---	CLUTCH ASSY TORQUE 29
6	---	ROLL ASSY RETARD (with 7)
7	---	ROLL RETARD
8	---	BEARING FEEDER
9	--	
10	--	
11	031E93291	ARM WEIGHT
12	---	HOLDER WEIGHT
13	---	GUIDE SIDE ENV L
14	---	GUIDE SIDE ENV R
15	---	
16	---	ENVELOPE FEEDER SUB ASSY [Same PL12.2.1]
17	---	GEAR PINION
18	---	
19	---	COVER BOTTOM
20	---	TRAY EXTENSION
21	---	
22	---	HARNESS ASSY SENSOR (J412-J417)
23	130K60390	SENSOR ASSY EXIT ENV
24	---	COVER WEIGHT
25	--	
26	---	PLATE CHUTE
27	---	SPRING PINCH
28	---	CAP PINCH
29	---	SHAFT PINCH
30	059E93940	ROLL PINCH
99	600K79310	KIT ROLL ASSY RETARD (with items 3~8)

PL12.2 Envelope Feeder II

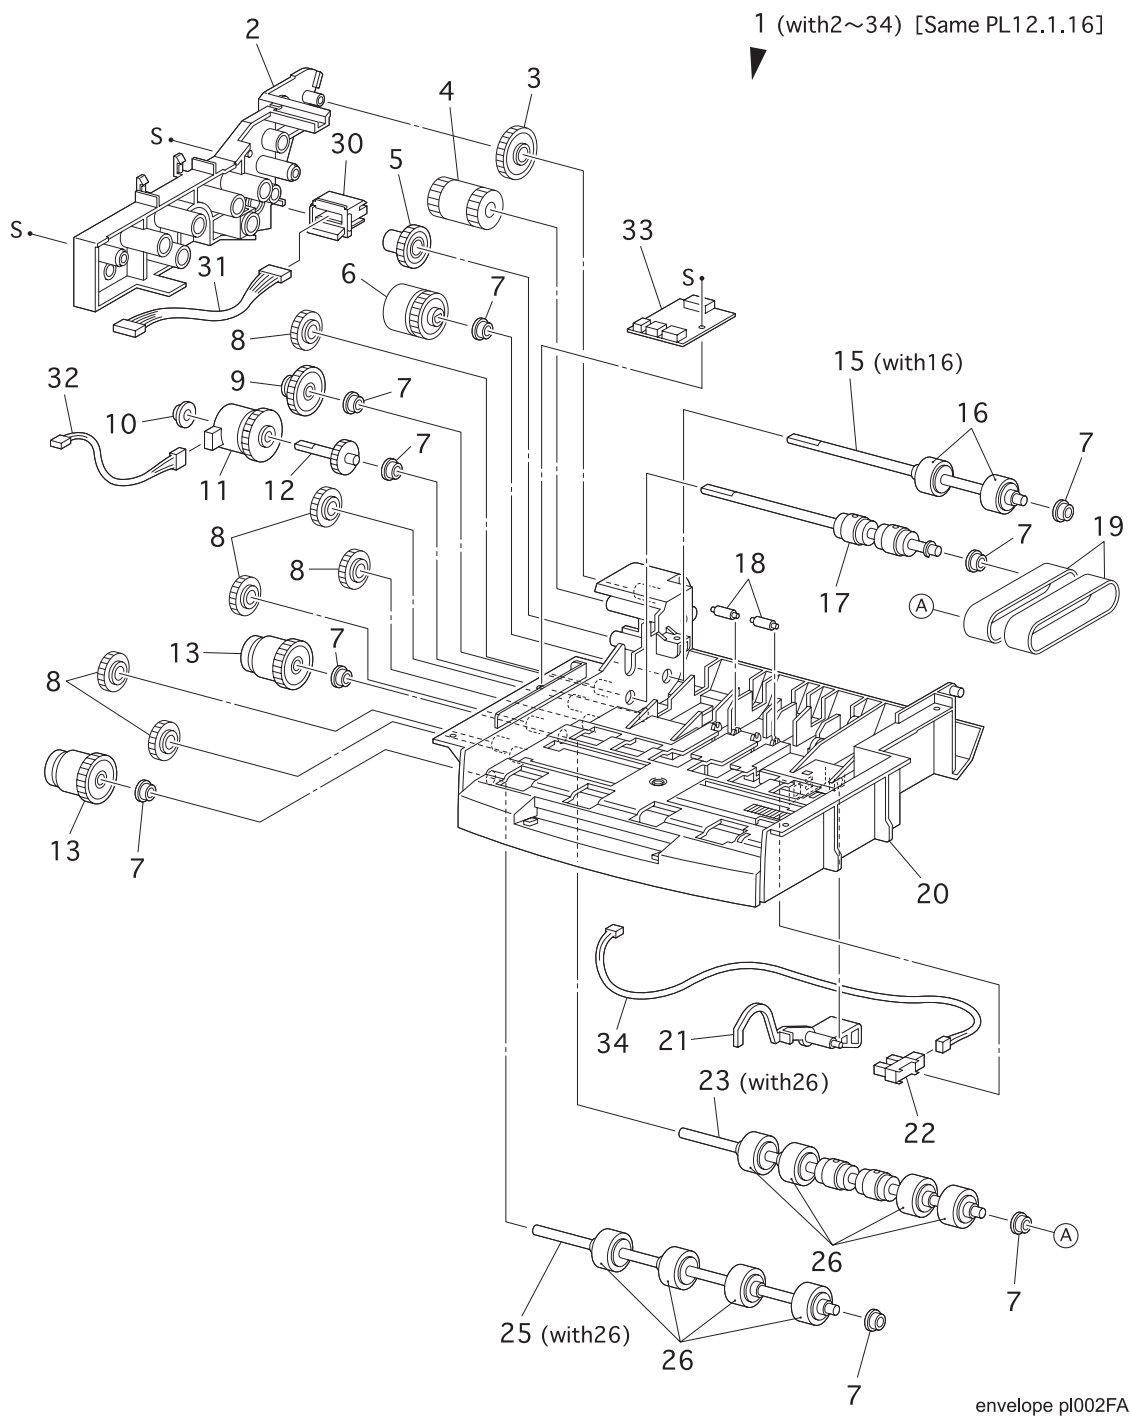

PL12.2 Envelope Feeder II

ITEM	PART NUMBER	PART NAME
1	---	ENVELOPE FEEDER SUB ASSY (with 2~34) [Same PL12.1.16]
2	---	COVER GEAR
3	007E27420	GEAR 29
4	---	GEAR DRIVE 21
5	007E36080	GEAR 23
6	121K87180	CLUTCH ASSY TORQUE 25
7	---	BEARING FEEDER
8	007E28780	GEAR IDLER 21
9	121K87201	CLUTCH ASSY ONE WAY 26
10	---	BEARING CLUTCH ELEC
11	121K87190	CLUTCH ELEC 29
12	006E47120	SHAFT CLUTCH ELEC 17
13	121K87210	CLUTCH ASSY ONE WAY TRUQUE 26A
14	---	
15	---	ROLL ASSY TRANS (with 16)
16	---	ROLL TRANS
17	---	ROLL ASSY BOTTOM
18	059E91910	ROLL PINCH ENV
19	---	BELT FEED
20	---	CHASSIS MAIN
21	---	ACTUATOR N/P ENVELOPE
22	130E81970	SENSOR PHOTO :NO PAPER
23	059K13390	ROLL ASSY FEED 1 (with 26)
24	---	
25	059K13401	ROLL ASSY FEED 2 (with 26)
26	---	ROLL FEEDER
27	---	
28	---	
29	---	
30	---	CONNECTOR ENV
31	---	HARNESS ASSY MAIN (J411-J418)
32	---	HARNESS ASSY CLUTCH (J413-J416)
33	---	PWBA ENV
34	---	HARNESS ASSY N/P (J414-J415)

